



Folks,

I have spent many hours trying to update the LOC nodes. I am using Windows 10 and I am running the virtual machine. I turn off the virtual machine and I press the top button on the LOC. The board blinks blue. My device manager shows STM32 Bootloader (sometimes I have to run zadig and replace STM32 Bootloader). I browse and select the firmware lps-node-firmware-2018.10.dfu. However, the update button remains great out.

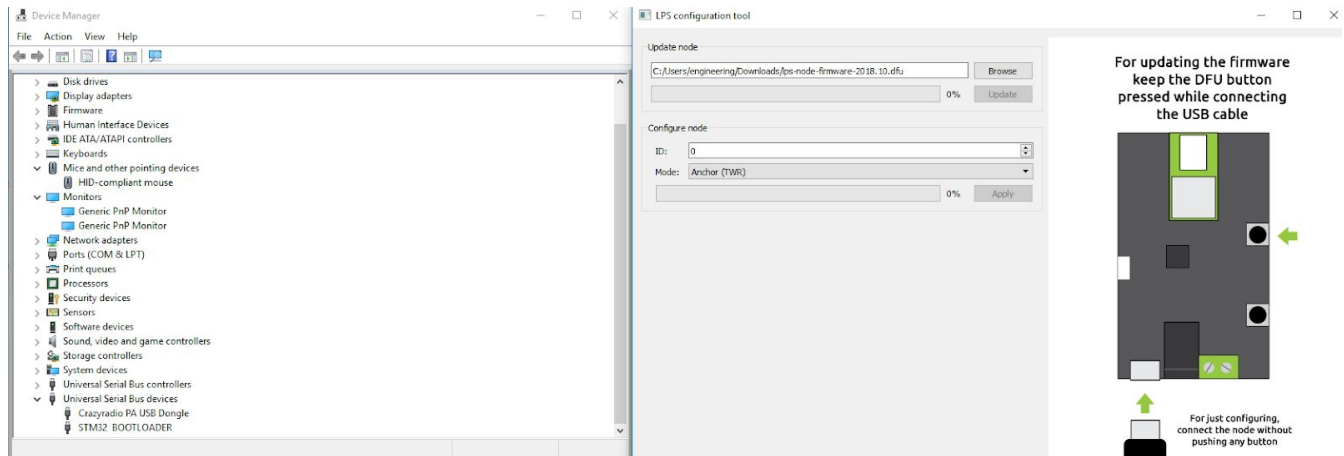

If I just plug the LOC node into the computer, My Device manager shows Loco Positioning Node

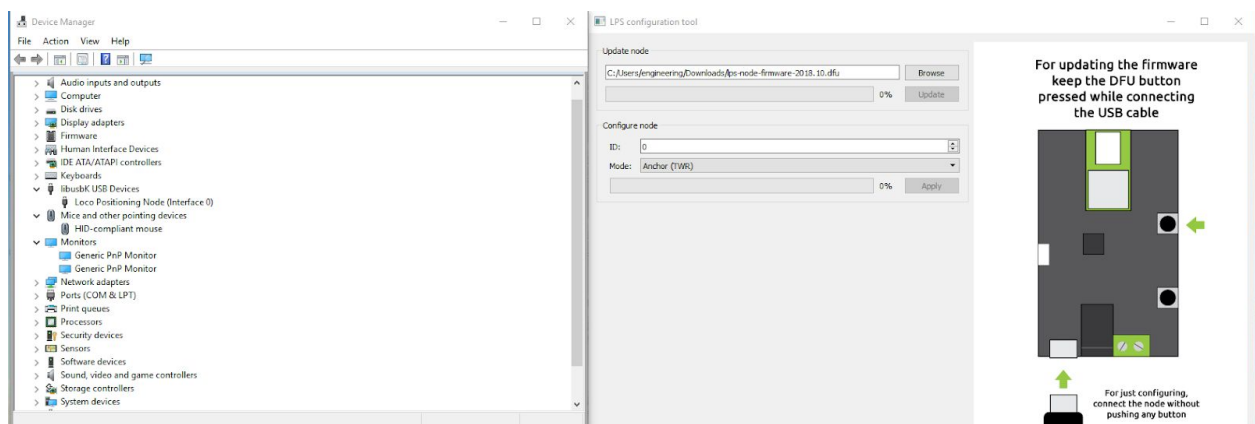

However, I am unable to configure the node.

I tried this on my laptop running windows 10 and I am having no luck there as well.

Thanks in advance

